

INSTALLATION OF GUARDIAN GOALPOSTS

Ensure bases are placed in the correct position and on a flat level surface.

Insert telescopic poles in to the bases.


For Bunting option

Wrap cable around Telescopic Pole anchor.



When using Temporary foundations remove black plastic base cap

For Cantilever Crossbar option

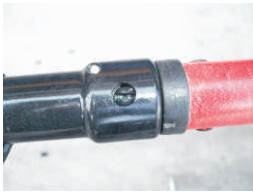

Push plastic screw head in



Pull bunting anchor off telescopic pole



Loosen plastic nut on canter lever bar



Place canter lever bar on to telescopic pole and tighten nut

For Solid Telescopic Crossbar option



Remove all plastic fittings from head by loosening the screws



Remove locking pin from telescopic pole



Insert top of telescopic pole in to solid cross bar



Insert locking pin through holes and lock



Starting with top lever, undo by lifting up, extend section accordingly



Add Signage



Guardian Goalposts raised to required height



INSTALLATION OF GUARDIAN GOALPOSTS

Figure 1 Configuration for roads – longitudinal view, not to scale



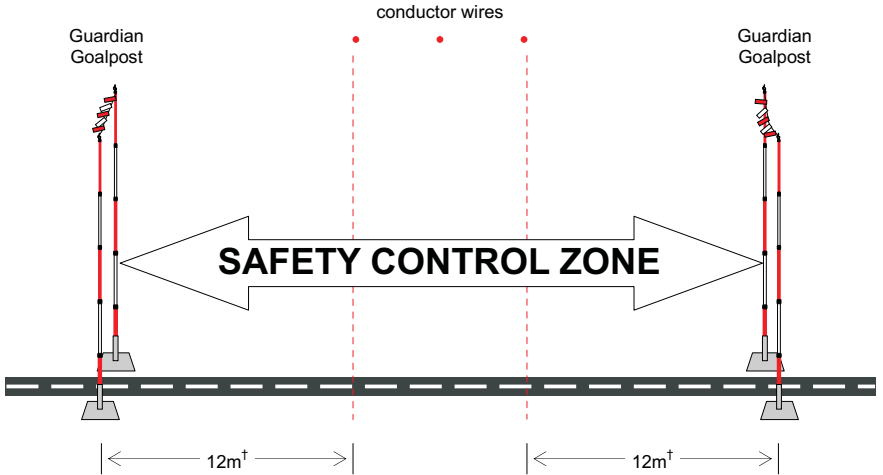


Figure 2 Configuration for roads – transverse view, not to scale

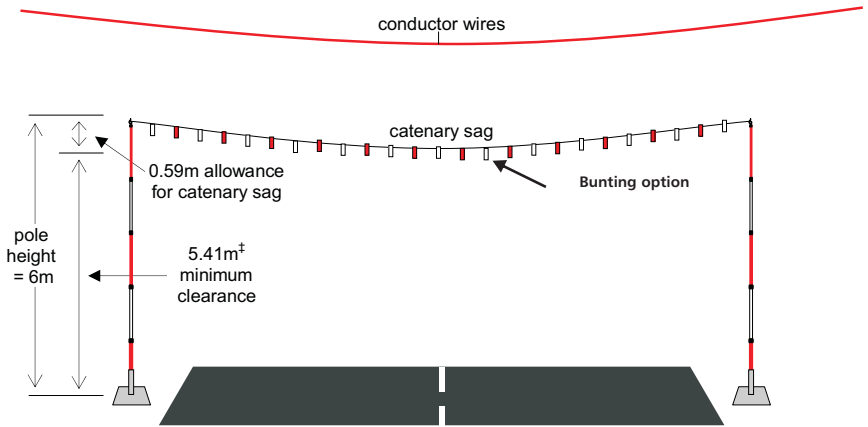

[†]GS6 Avoidance of danger from overhead electric power lines clause 24

[‡]Traffic Signs Manual, Chapter 8, Traffic Safety Measures and Signs for Road Works and Temporary Situations Part 1: 2006, clause D3.2.22 states that the minimum headroom at temporary structures should be 5.41m.

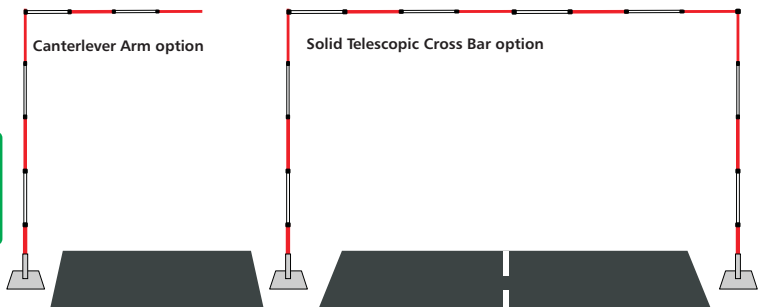

For technical enquiries
Tel: 01905 427100
Email: sales@nal.ltd.uk