



## CIVILS INSTALLATION OF STAKKABOX

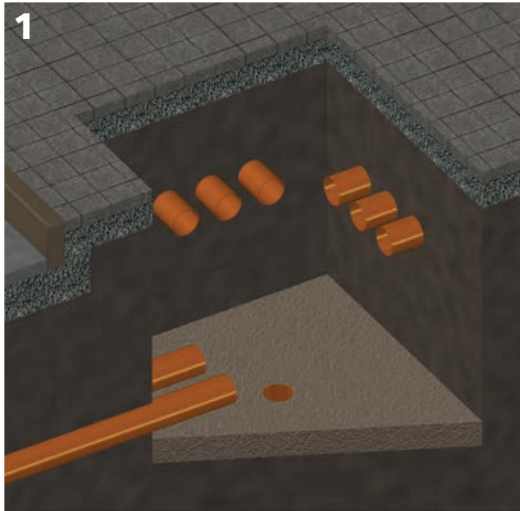


1  
Cast 100mm concrete base with central drainage hole for soak away.

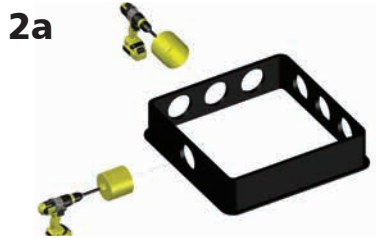


2a  
Using the appropriate hole cutter drill holes into a STAKKABOX section as required for incoming ducts OR



2b  
Use factory pre-drilled duct access sections.

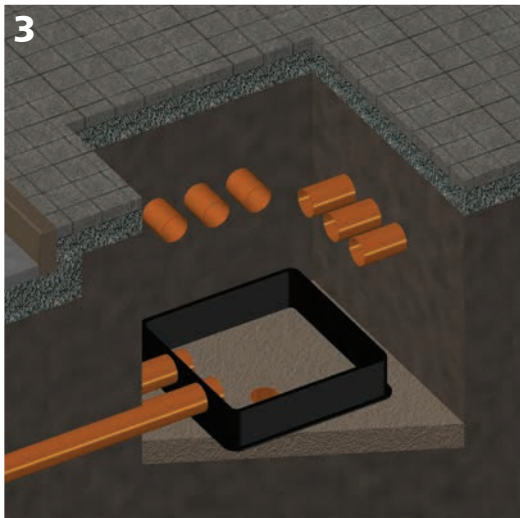


3  
Place access section onto wet concrete and insert ducting.

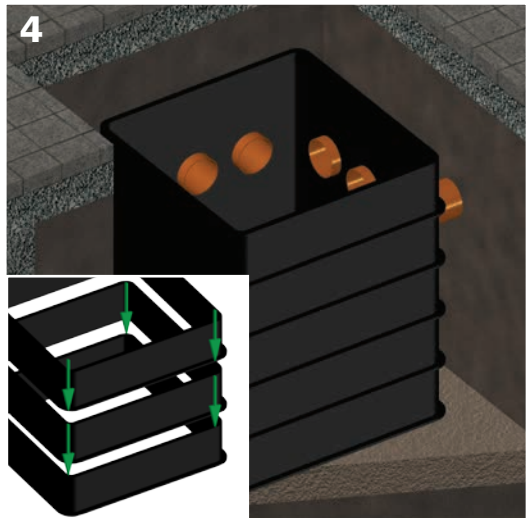

4  
Add sections by stacking them vertically, with external ribs positioned at the bottom.


## CIVILS INSTALLATION OF STAKKABOX

5

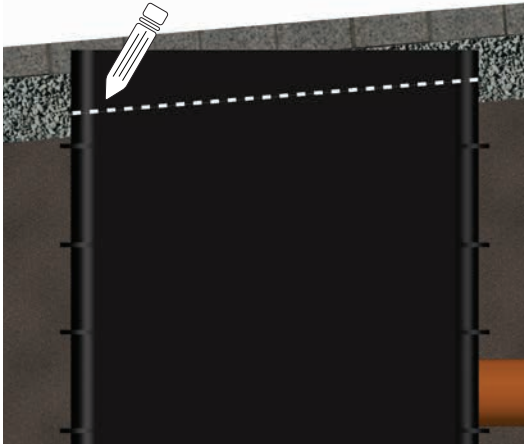


Mark the top section in line with finished surface level, allowing for depth of cover & frame.

6

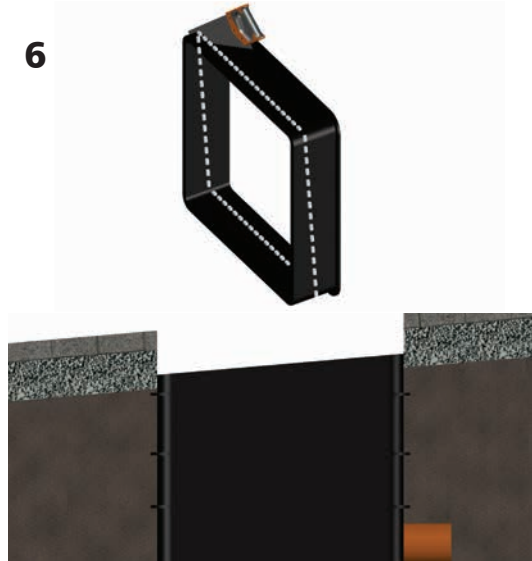


Remove the marked section and cut with hand saw along the pre-marked line and refit back onto the chamber.

7

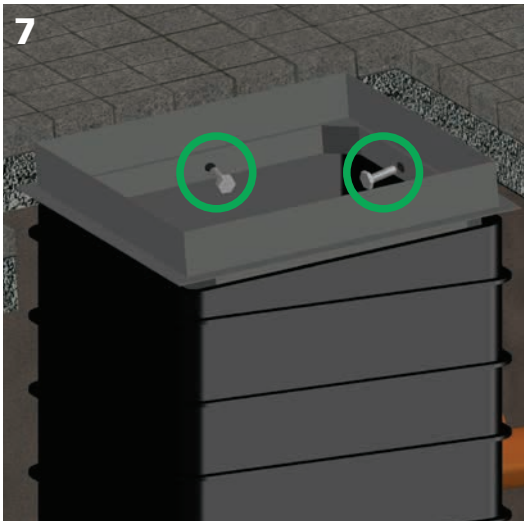

Install and fix the frame directly onto the chamber.

8

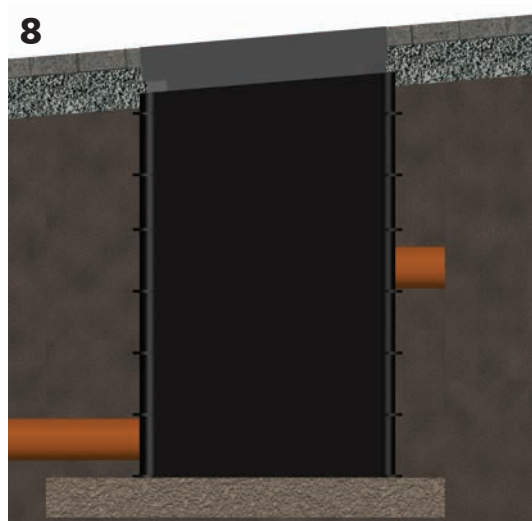

Fit cover into the frame and reinstate surrounding surfacing.