


DO NOT REMOVE DUCT BUNG FROM LOOP BOX

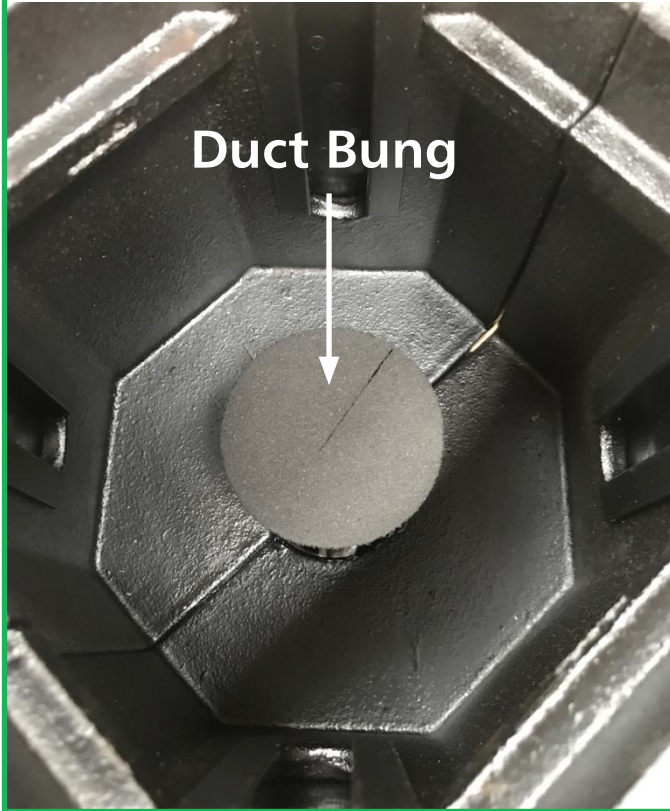

ENSURE ALUMINIUM STRIPS ARE PARALLEL TO KERB. ONLY SLOT CUT THROUGH ALUMINIUM STRIPS.



Step 1 - Entry to remote chamber is excavated and 50/100mm duct is installed.



Step 2 - Duct is connected to spigot of loop box and surrounded with 150mm ST4 concrete.



Step 3 - Top surface is applied ensuring loop box lid is flush with finished level.



Step 4 - Install loops through black duct bung. **DO NOT REMOVE THIS BUNG.**

Installation of Carriageway Loop Box Offset from Kerb

Installation of Carriageway Loop Box Beside the Kerb

